
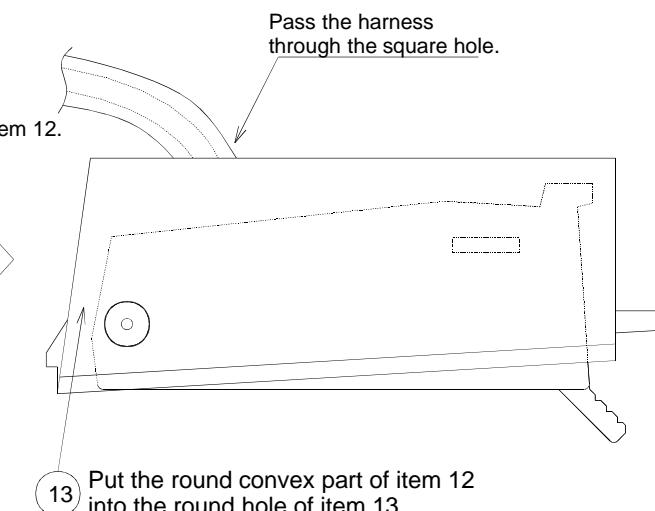
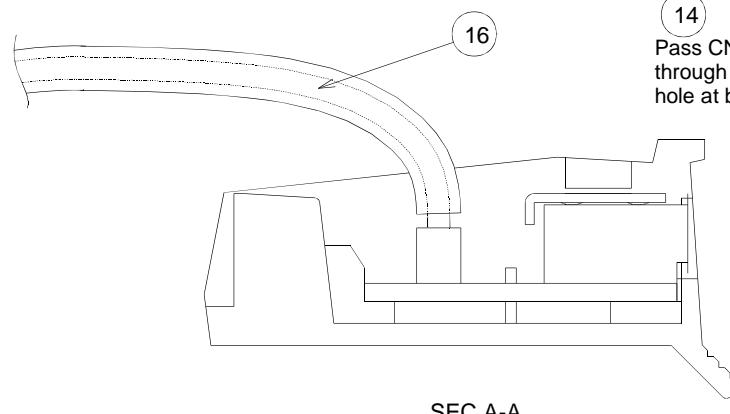
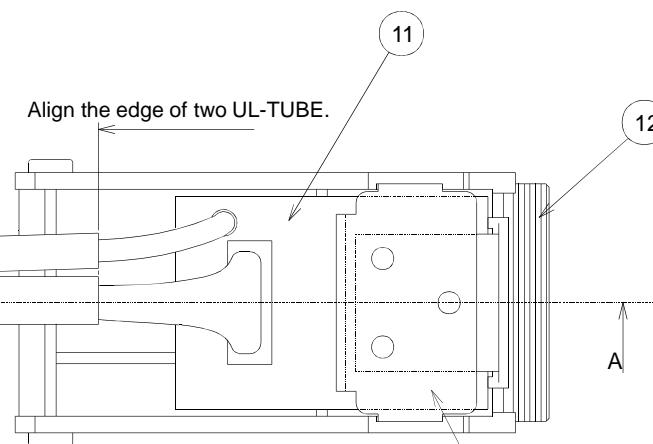


*Clamp two harnesses in parallel near the core.
 *The harnesses must not be twisted.
 *Clamp the harnesses so that the UL-TUBE would not move.

Important Safety Work

Attach the core to two leads as this drawing shows.

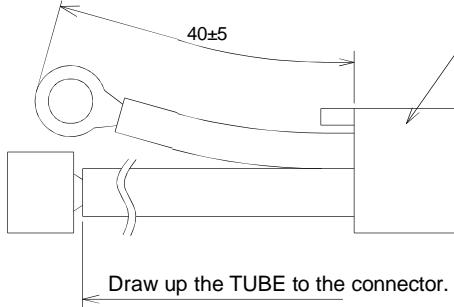

CONFIDENTIAL

T966 (MA-21D5) CN UNIT Drawing